

Set Headset Working Mode



Headsets are only compatible with Office 5370 and 5380 Desk-phones

Please make sure you purchase the correct connection lead

Liaise with the system administrator before purchasing or connecting a headset


To activate headset operation

You have connected a headset and now want to activate the headset mode.


A headset can be connected in parallel with the handset. You can switch the headset mode on and off.

If you answer a call in headset mode using the Call key or Loudspeaker key, the call is provided on the headset. Alternatively you can also answer the call by picking up the handset.


This phone supports headsets based on the DHSG standard, which allows you to set up and to end calls from the headset. Ask your dealer which headsets are particularly well suited for this phone.

- 


Menu

Press the *Menu* Foxkey.
- 


Settings

Scroll to *Settings* and press the *Select* Foxkey.
- 


Audio

Scroll to *Audio* and press the *Select* Foxkey.
- 

Headset

Scroll to *Headset* and press the *Modify* Foxkey.
- 

<Setting value>

Activate/deactivate the headset mode and confirm with the *Ok* Foxkey.
 → The microphone is now deactivated,  is displayed.

See next page for headset use

Set Headset Working Mode



Using a headset

To make a phone call with the headset.

If you answer a call in headset mode using the Call key or Loudspeaker key, the call is provided on the headset. Alternatively you can also answer the call by picking up the handset.



Your phone is ringing and the indicator LED is flashing. To answer the call, proceed as follows:

Press the Call key or Loudspeaker key.
→ The call is provided on your headset.

Open listening



Press the *Open listening* Foxkey.
→ The phone's loudspeaker is activated.

Hands-free operation



Press the *Hands-free* Foxkey.
→ The phone's microphone is switched on and the headset microphone is switched off.

Headset



Press the *Headset* Foxkey.
→ Back to the headset mode.



Ending a call:

Press the End key or Loudspeaker key.